

## PARTS LIST

- |   |                                    |   |
|---|------------------------------------|---|
| 1. Outer Housing Assembly (1 each)                              | 7. Inner Housing Assembly (1 each) | 16. Spring Latch (1 each)               |
| 2. Water Seal (1 each)  | 8. M5-0.8P Machine Screw (4 each)  | 17. 4mm x 20mm Wood Screw (8 each)      |
| 3. Spindle, Spring Latch / <b>Passage Function</b> (1 each)     | 9. Inner Escutcheon (1 each)       | 18. Coil Spring (1 each)                |
| 3.1 Spindle, Spring Latch / <b>Store room Function</b> (1 each) | 10. M3-0.5P Machine Screw (2 each) | 19. Tailpiece, Dead Bolt (1 each)       |
| 4. Nylon Washer (2 each)  | 11. Code Cover (1 each)            | 20. Plastic Snap Bushing (1 each)       |
| 5. 2.5mm Allen Wrench (1 each)                                  | 12. Push Pin (1 each)              | 21. Strike Plate, Dead Bolt (1 each)    |
| 6. Lever Handle with Set Screw (2 each)                         | 13. Indicator (1 each)             | 22. Strike Plate, Spring Latch (1 each) |
|   | 14. Dead Bolt (1 each)             | 23. Alarm Housing (1 each)              |
|   | 15. Battery Housing (1 each)       | 24. 3mm x15mm Wood Screw (4 each)       |

