

## Step 11

### CODE SETTING AND DELETING

#### REMOTE CONTROLLER CODE SETTING PROCEDURES

- a. Insert Push Pin into upper right side of Inner Housing Assembly for 1 second until green light start blinking.
- b. Point Controller toward infrared window and press until green is sold. If Red Light glows, teaching is not successful.

#### REMOTE CONTROLLER CODE DELETION PROCEDURE

- a. Insert Push Pin into upper right side of Inner Housing Assembly for 5 second, green light glows for 2 second, all codes are deleted.