

DIAGRAM 1.0


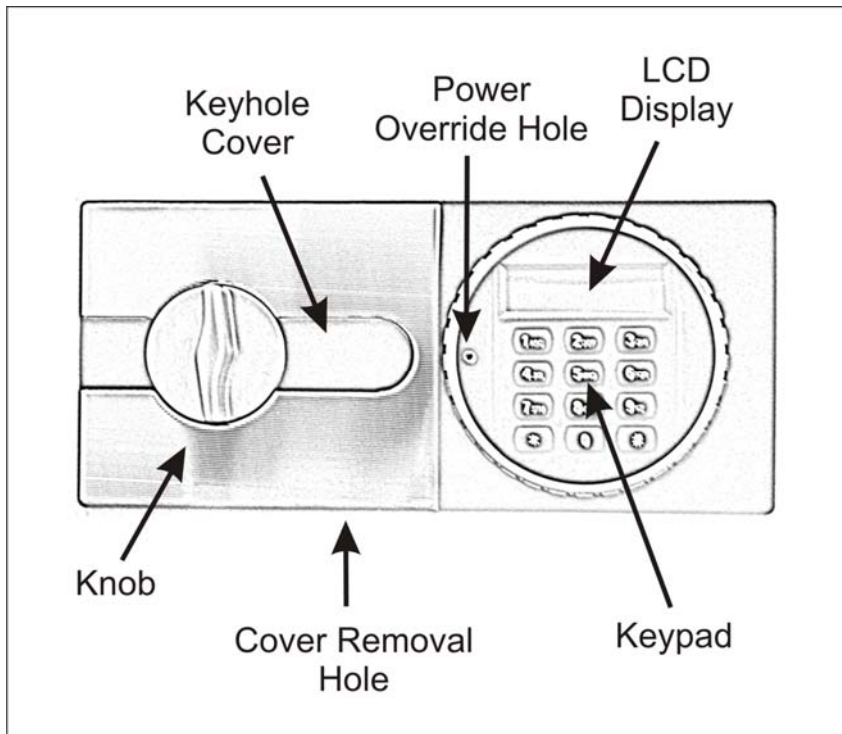


DIAGRAM 2.0

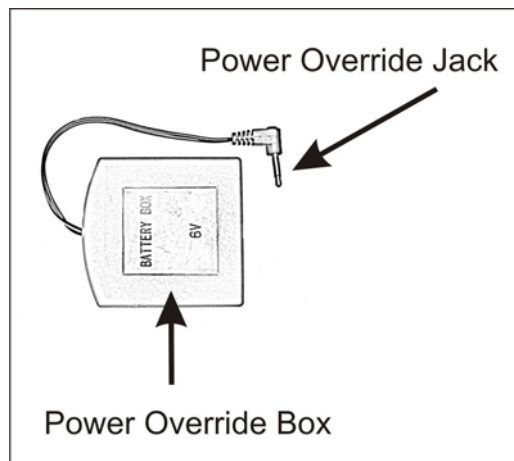

WELCOME:

STEP 1 – OPENING THE SAFE:

1. PRESS THE **#** KEY. (IF YOU DO NOT WANT YOUR CODE SHOWING ON THE **LCD DISPLAY** PRESS THE **#** FOLLOWED BY THE ***** KEY) THE **LCD DISPLAY** WILL TURN **ORANGE**.
2. ENTER CODE. **FACTORY DEFAULT CODE IS: 1-2-3-4**
3. PRESS THE **#** KEY.
4. THE **LCD DISPLAY** WILL TURN **BLUE** AND SHOW **OPEN**.
5. TURN THE **Knob** CLOCKWISE (RIGHT) AND OPEN THE DOOR.

NOW YOU ARE READY TO OPERATE YOUR SAFE.

ENROLLING:

STEP 2 – CHANGING CODE

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. PRESS THE **SETUP BUTTON** (LOCATED IN BACK OF DOOR), THE **LCD DISPLAY** WILL TURN **BLUE**.
3. **NOW:** (WHILE THE **LCD DISPLAY** IS **BLUE**)
 - a. ENTER YOUR NEW CODE (1-8 DIGITS). IF YOUR CODE IS 8 DIGITS LONG, SKIP 3.B.
 - b. PRESS THE **#** KEY.
 - c. THE **LCD DISPLAY** WILL TURN **BLUE** AND SHOW **IN**.
 - d. THE **LCD DISPLAY** WILL BRIEFLY SHOW YOUR NEW CODE.
 - e. YOUR CODE IS NOW SET TO OPEN THE SAFE.

NOTE: IT IS HIGHLY RECOMMENDED TO LEAVE THE DOOR OPEN AND PRACTICE YOUR NEW CODE BEFORE CLOSING THE DOOR TO MAKE SURE YOU REMEMBER YOUR NEW CODE.

EMERGENCY OPENING:

KEY OVERRIDE:

1. INSERT THE **POWER OVERRIDE JACK** INTO THE **COVER REMOVAL HOLE** AND PUSH UPWARDS.
2. GENTLY REMOVE THE **KEYHOLE COVER** AND INSERT THE TUBULAR KEY.
3. TURN THE KEY CLOCKWISE (RIGHT) AND THEN TURN THE KNOB TO OPEN THE SAFE.

POWER OVERRIDE:

1. INSTALL 4 NEW BATTERIES IN THE **POWER OVERRIDE Box** AND PLUG THE **POWER OVERRIDE JACK** INTO THE **POWER OVERRIDE HOLE**.
2. OPEN THE SAFE BY FOLLOWING **STEP 1**.
3. OPEN BATTERY COVER AND INSTALL 4 NEW BATTERIES.
4. CLOSE BATTERY COVER, THE SAFE GOES BACK TO NORMAL OPERATION MODE.

NOTE: THE SAFE KEEPS THE CODE IN MEMORY UP TO 6 MONTHS WITHOUT POWER.

TIPS:

- USE DIGITS 1 – 0 TO ENTER YOUR CODE.
- USE THE * KEY AS BACKSPACE TO CLEAR THE LAST DIGIT.
- HOLD THE * KEY FOR MORE THAN 2 SECONDS TO CLEAR THE **LCD DISPLAY**.
- IF YOU ENTER A WRONG CODE THE **LCD DISPLAY** WILL SHOW **ERROR**.
- IF YOU ENTER A WRONG CODE FOR THREE CONSECUTIVE TIMES THE **LCD DISPLAY** WILL SHOW **ERROR** AND THE SAFE WILL BE LOCKED FOR 3 MINUTES. AFTER 3 MINUTES THE SAFE WILL RETURN TO NORMAL OPERATION MODE.
- WHEN THE **LCD DISPLAY** SHOWS **LO-BAT** IT IS HIGHLY RECOMMENDED TO CHANGE THE BATTERIES AS SOON AS POSSIBLE.



USER'S MANUAL FOR ELECTRONIC SAFE

MODELS:

HD-20, HD-23, HD-25, HD-34, HD-45, HD-53, HD-63A, HD-63B, HD-63C, HD-73, HD-100, HD-120, HD-150